





STACK Motorsport
Sycamore, IL 60178
Tel: 888 867 5183
Fax: 888 364 2609
Email: sales@stackltd.com

Thank you for choosing Stack. please locate a copy of the most recent Stack DataPro software version for use with circuit racing analysis (available on CD, USB Memory Stick, or may be downloaded from the following location on the web: www.stackltd.com/datapro6/). Follow the necessary steps below for installing the software onto your PC and performing the necessary upload to your display system to ensure correct operation and data download compatibility.

- 1.) Connect the USB memory stick to a viable USB slot on your computer or install the software CD into the appropriate drive and locate the appropriate drive location where the disk has been inserted in the My Computer menu, accessible from the Start button on your Windows XP operating system. Please note that your drive letter designation may vary from the information shown in the image below. If you are downloading the file from our website, please locate the DataPro.zip folder from the location where you downloaded it and unzip / decompress the folder to continue following the steps below.

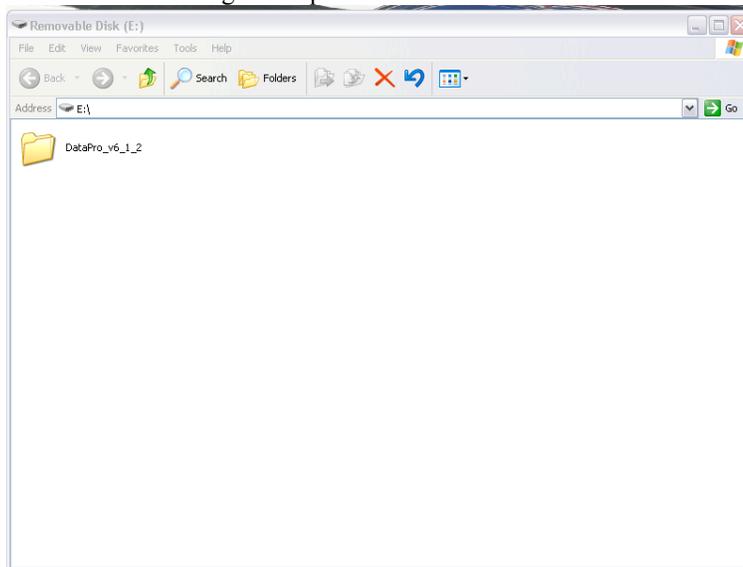


- 5.) Once Designer opens, you should see a new window that appears as shown below. Click File in the upper left hand corner of this Window to open the File Menu.

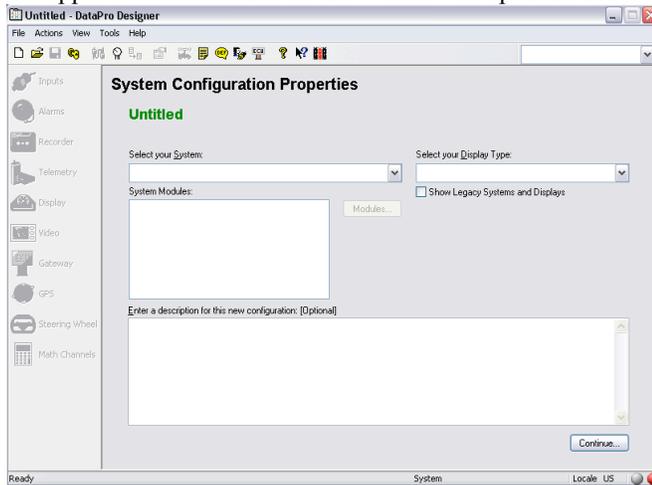

- 6.) With the File Menu open (shown below), locate and select the Authorisation feature to open this feature.



- 7.) A new window (shown below) will open asking for your system TAG code (located on the silver ident label on the product). If the label is not accessible or the printing cannot be easily read from its current installation, you may also read the TAG code by connecting the CAN-USB download cable between your powered up Stack hardware and your laptop and clicking the Get Tag button after a connection has been established. Once you have entered your tag, please locate and enter your software authorization PIN in the PIN code field below and click the Authorise button. Note: If you are upgrading from a previous version of DataPro, please also enter any past PIN codes for your hardware here as well to allow access to past logged files if you have transferred that information to your new installation / machine.

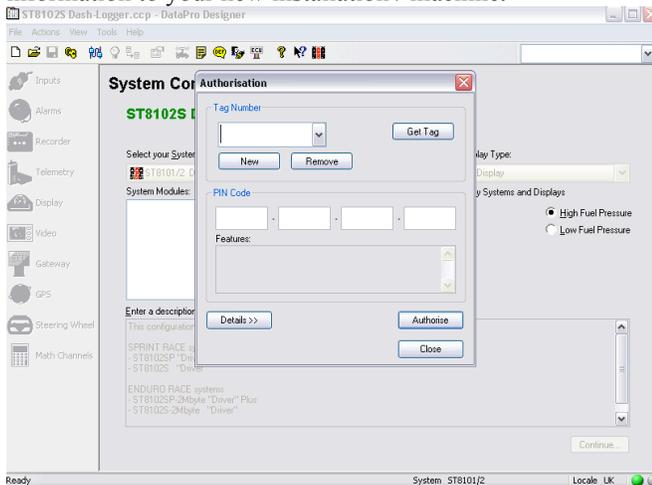

- 8.) Once the necessary PIN codes have been authorized for your system, you may close this window. You may now proceed with the rest of your system configuration and data analysis needs.