


QUESTIONS:

If after completely reading these instructions you have questions regarding the operation or installation of your instrument(s), please contact STACK at +44 (0) 1869 240404

You may also email us at sales@stackltd.com.

Additional information can also be found at <http://www.stackltd.com>

Temperature Gauges

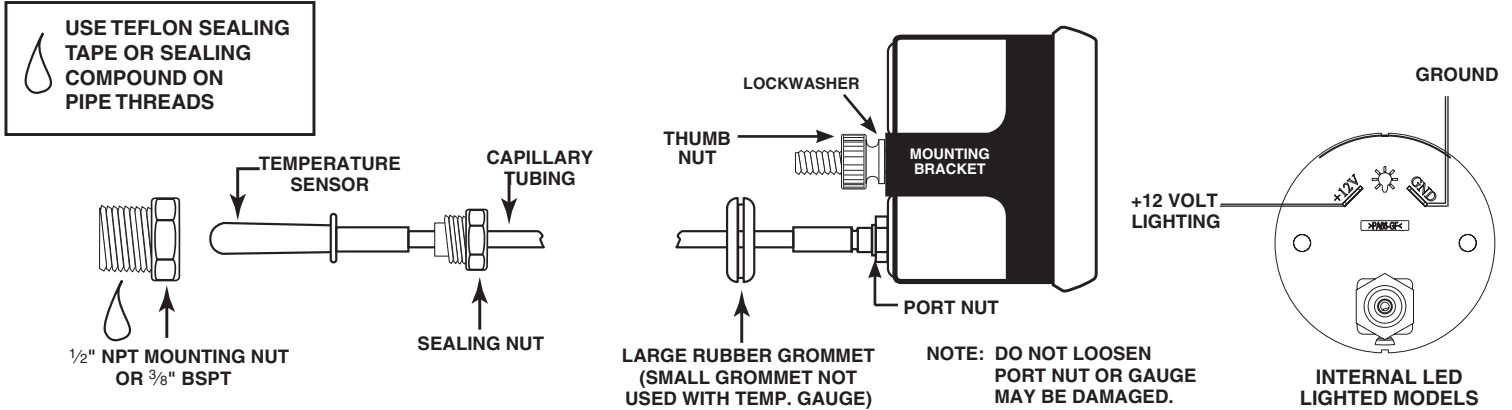

NOTE: Some late model vehicles use electronic sensors in their pressure and temperature senders for engine control functions. Before removing the original sender, we recommend that you contact your automotive dealer to be sure no critical functions will be disrupted.

1. Gauge may be mounted in-dash or in custom mounting. Secure gauge with mounting clamps supplied. 52mm gauges mount in 52.4mm diameter hole.

CAUTION: DO NOT make severe bends in the capillary tubing. It may break internally, thus, voiding the warranty. DO NOT remove capillary tubing from gauge.

2. Cut a 23mm dia. hole in firewall. Place grommet on capillary tubing. A slit must be made in the grommet to accomplish this. Route sensing bulb through firewall and secure grommet in the 23mm hole.


3. Insert and tighten mounting nut in the 1/2" NPT port on engine. (Metric scaled gauges will use 3/8" BSPT mounting nut). Insert temperature sensing bulb in the mounting nut and carefully tighten sealing nut, while holding mounting nut. Be sure to check for adequate internal clearances for the temperature sensing bulb.

4. Make sure gauge tubing is free from hazard of moving parts or hot engine components.

5. Wire +12V terminal to dash lighting circuit or other 12V power source and GND terminal to a good ground.

6. Start engine and thoroughly inspect installation for any leaks.

Pressure, Vacuum & Boost Gauges

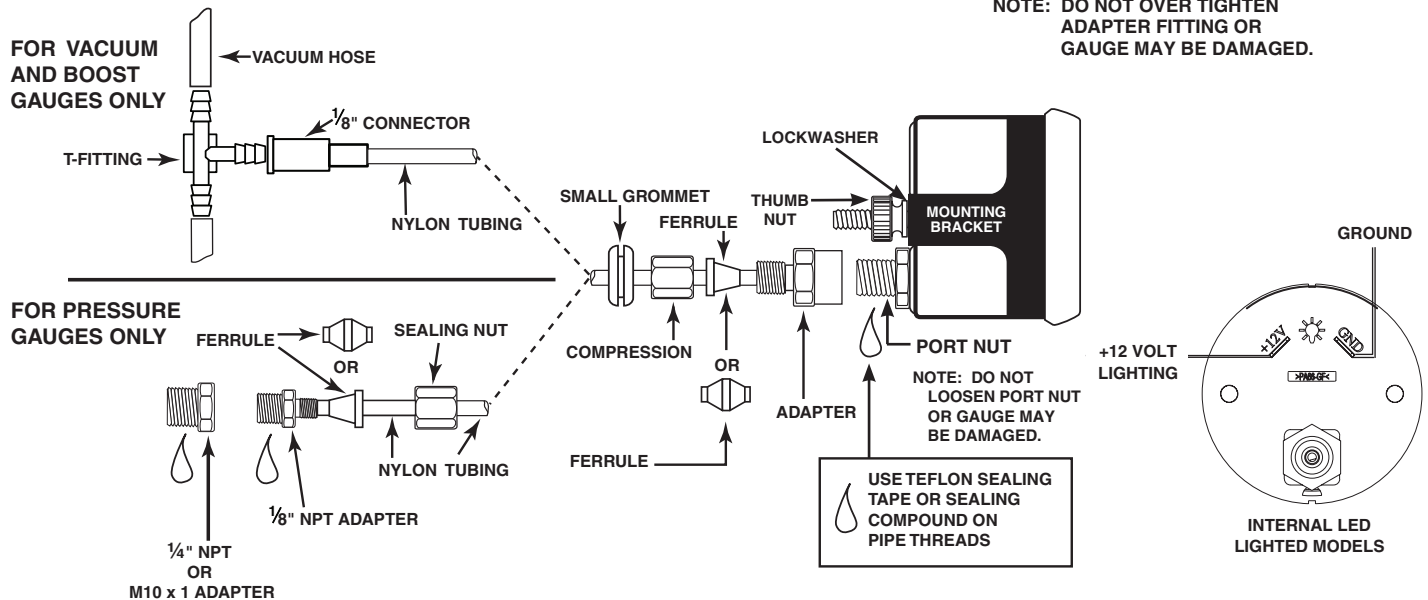

NOTE: Some late model vehicles use electronic sensors in their pressure and temperature senders for engine control functions. Before removing the original sender, we recommend that you contact your automotive dealer to be sure no critical functions will be disrupted. With pressure gauges, it is beneficial to add a T-fitting to install your new gauge and to keep the warning light operational. This allows you to monitor the pressure and still have a warning light to indicate emergency conditions.

1. Gauges may be mounted in-dash or in custom mounting. Secure gauge with mounting clamps supplied. 52mm gauges mount in 52.4mm diameter hole.
2. Drill 9.5mm dia. hole and install rubber grommet where pressure or vacuum line passes through sheet metal, such as firewall.

3. Attach nylon pressure line to fitting on back of gauge using adapter, ferrule, and compression nut as shown in diagram above. Route line through grommet to engine compartment. Connect line to pressure port on engine by using 1/8" adapter (1/4" if needed), ferrule and compression nut for pressure gauges or 1/8" connector and T-fitting for vacuum and boost gauges.
4. Make sure line is free from hazard of moving parts or hot engine components. It is recommended that copper tubing or stainless steel braided line be used where a potential hazard exists.
5. Wire +12V terminal to dash lighting circuit or other 12V power source and GND terminal to a good ground.
6. Start engine and thoroughly check installation for leaks.

SERVICE

For service send your product to STACK in a well packed shipping carton. Please include a note explaining what the problem is along with your phone number. Please specify when you need the product back. If you need it back immediately mark the outside of the box "PRIORITY REPAIR," and STACK will service product within two days after receiving it. (£5.00 charge will be added to the cost of "PRIORITY REPAIR.") If you are sending product back for Warranty adjustment, you must include a copy (or original) of your sales receipt from the place of purchase.

12 MONTH LIMITED WARRANTY

STACK, Ltd. warrants to the consumer that all STACK products will be free from defects in material and workmanship for a period of twelve (12) months from date of the original purchase. Products that fail within this 12 month warranty period will be repaired or replaced at STACK's option to the consumer, when it is determined by STACK, Ltd. that the product failed due to defects in material or workmanship. This warranty is limited to the repair or replacement of parts in the STACK instruments. In no event shall this warranty exceed the original purchase price of the STACK instruments nor shall STACK, Ltd. be responsible for special, incidental or consequential damages or costs incurred due to the failure of this product. Warranty claims to STACK must be transportation prepaid and accompanied with dated proof of purchase. This warranty applies only to the original purchaser of product and is non-transferable. All implied warranties shall be limited in duration to the said 12 month warranty period. Breaking the instrument seal, improper use or installation, accident, water damage, abuse, unauthorized repairs or alterations voids this warranty. STACK, Ltd. disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured by STACK.

FOR COMPLETE OPERATIONS GUIDE PLEASE VISIT: WWW.STACKLTD.COM

Stack Ltd. Wedgwood Road Bicester OX26 4UL UK

T : +44 (0) 1869 240404

F : +44 (0) 1869 245500

E : sales@stackltd.com